









# BOSCH COMBI

Sägetisch  
Sawing bench  
Table de sciage  
Mesa de aserrar  
Banco per sega  
Mesa de corte  
Combi zaagtafel  
Combi savebord  
Combi-sagbord  
Combi-sågbord

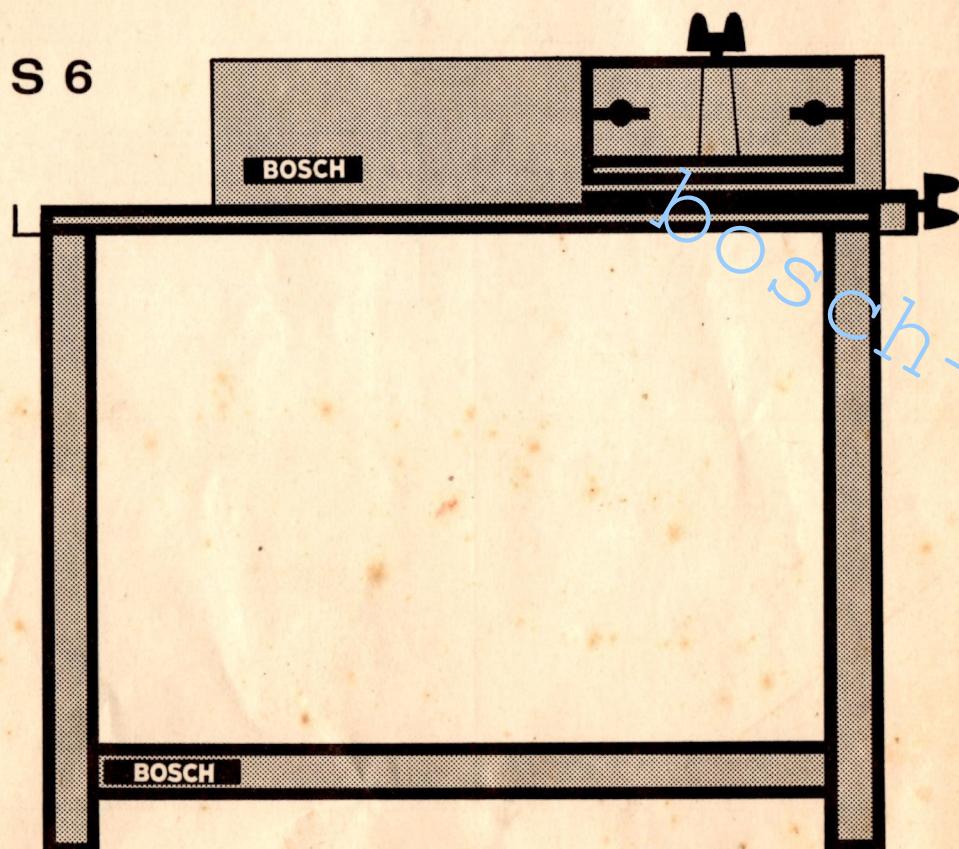

Bedienungsanleitung  
Operating Instructions  
Instructions d'emploi  
Instrucciones de servicio  
Istruzioni d'uso  
Instruções de Serviço  
Gebruiksaanwijzing  
Betjeningsvejledning  
Bruksanvisning  
Bruksanvisning

bosch-combi.de

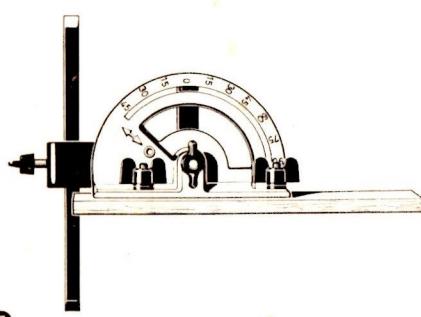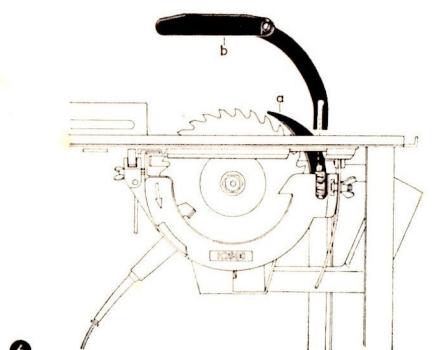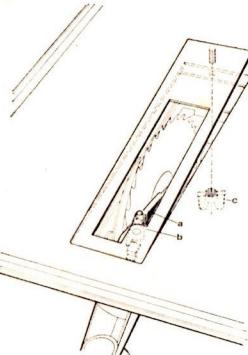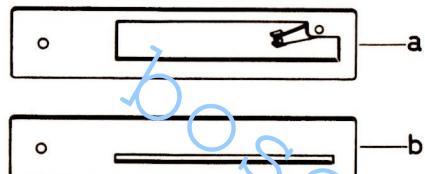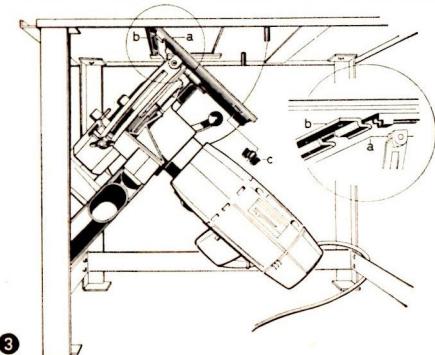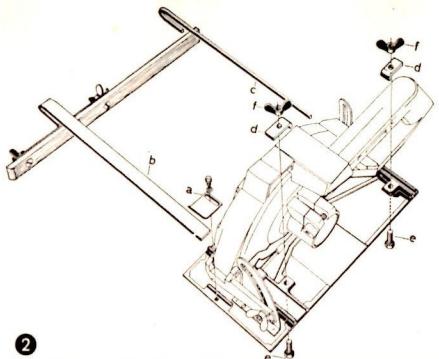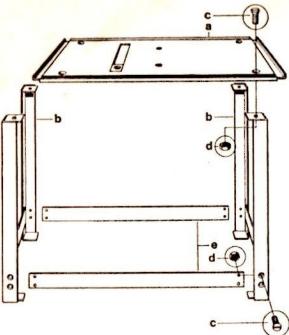

Abbildungen unverbindlich  
Illustrations subject to modification  
Illustrations sans engagement  
Illustraciones sin compromiso  
Desenhos sem compromisso  
Illustrazione senza impegno  
Afbeeldingen niet bindend  
Illustrationer uden forbindende  
Avbildningar ej bindande  
Illustrasjoner uforbindelig

## Deutsch

### Zusammenbau des Tisches (Bild 1)

1. Tischplatte **a** und Füße **b** mit Senkschrauben **c** und Muttern **d** verschrauben.
2. Querstreben **e** mit **c** und **d** anbringen.

### Vorbereitung der Säge (Bild 2)

1. Schnittanzeiger **a** abschrauben.
2. Parallelanschlag **b** und Zusatzanschlag **c** herausziehen.
3. Klemmstücke **d**, Schrauben **e** und Flügelmuttern **f** abschrauben.

### Sägeeinbau (Bild 3)

1. Schmale Seite der Grundplatte **a** in den Falz **b** der Sägetischplatte einhängen.
2. Grundplatte hochdrücken und mit 2 Flügelmuttern **c** verschrauben.

### Auswahl des Sägetischeinsatzes (Bild 4)

Breiter Schlitz **a**: zum Fräsen (Wanknutscheiben) und für geneigte Säge.

Schmaler Schlitz **b**: zum normalen Sägen (Sägeblatt und Tisch stehen rechtwinklig).

### Montage des Sägetischeinsatzes (Bild 5)

1. Vor Befestigung des Sägetischeinsatzes mit breitem Schlitz die Schutzhülle **a** zurückdrücken.
2. Hebel **b** in die zurückgedrückte Schutzhülle der Säge einhängen.
3. Bei dem Sägetischeinsatz mit schmalem Schlitz wird die Schutzhülle vom Einsatz selbst zurückgehalten.
4. Sägetischeinsatz mit Flügelmuttern **c** verschrauben.

### Spaltkeilmontage (Bild 6)

Spaltkeil **a** (Teilesatz 258) abschrauben, dafür Spaltkeil mit Schutzhülle **b** einsetzen (Teilesatz 252, Sonderzubehör).

**Achtung:** Laut Maschinenschutzgesetz ist der Betrieb von stationären Kreissägen nur mit Spaltkeilen erlaubt, die mit Schutzhäuten versehen sind!

### Zubehör (Bild 7)

Als Zubehör ist dem Sägetisch ein Anschlag- und Gehrungslineal (Teilesatz 206) beigegeben, das je nach Verwendung an allen vier Seiten des Sägetisches angebracht werden kann.

### Arbeitshinweis:

**Wir empfehlen, den Tisch auf einen festen Unterbau anzuschrauben, um sicheres Arbeiten zu gewährleisten!**

## English

### Assembly of the bench (fig. 1)

1. Screw down bench plate **a** and feet **b** with countersinks **c** and nuts **d**.
2. Fix cross struts **e** with **c** and **d**.

### Preparation of the saw attachment (fig. 2)

1. Screw off cutting indicator **a**.
2. Pull out fence **b** and auxiliary guide **c**.
3. Screw off clamping plates **d**, screws **e** and wing nuts **f**.

### Mounting the saw attachment (fig. 3)

1. Fit narrow side of base plate **a** into slot **b** of sawing bench plate.
2. Press upwards base plate and screw down with 2 wing nuts **c**.

### Selection of sawing bench insert (fig. 4)

**Broad slot a:** for milling (grooving washers) and for inclined saw.

**Narrow slot b:** for normal sawing (saw blade and bench are kept well right-angled).

### Mounting the sawing bench insert (fig. 5)

1. Before mounting the sawing bench insert with **broad slot**, push back guard **a**.
2. Hook lever **b** into pushed back guard of the saw attachment.
3. When using the insert with **narrow slot**, the guard is retained by the insert itself.
4. Screw down sawing bench insert with wing nut **c**.

### Assembly of clearing wedge (fig. 6)

Screw off clearing wedge **a** (spare part list 258), insert clearing wedge with guard **b** (spare part list 252, extra accessory).

**Note:** According to regulations in some countries, only circular saws with clearing wedges which are equipped with guards ought to be used as bench saws!

### Accessory (fig. 7)

A stop and mitring rule (spare part list 206) can be used as accessory for the sawing bench, according to its application, on any side of the bench.

**Please note:**

**We recommend to screw the bench to a firm base plate in order to guarantee safe working!**